

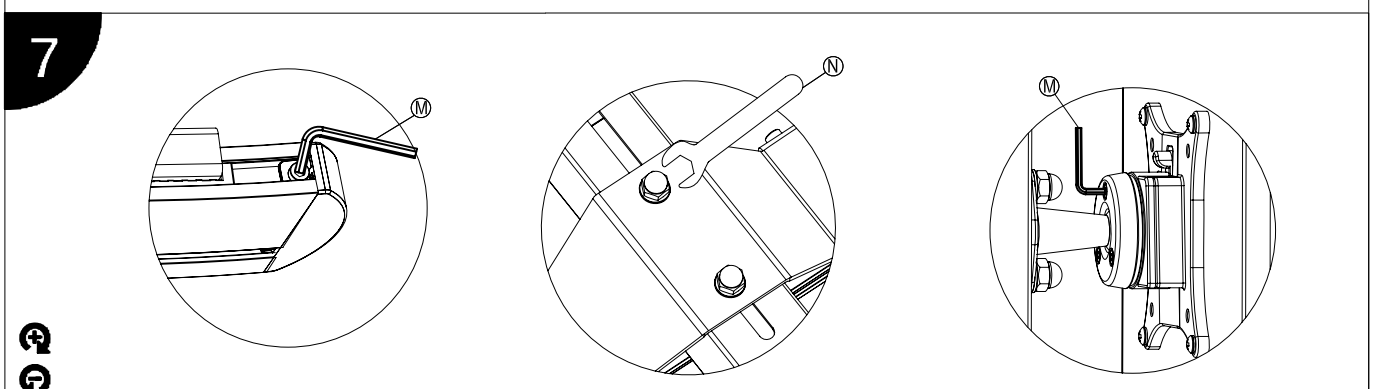
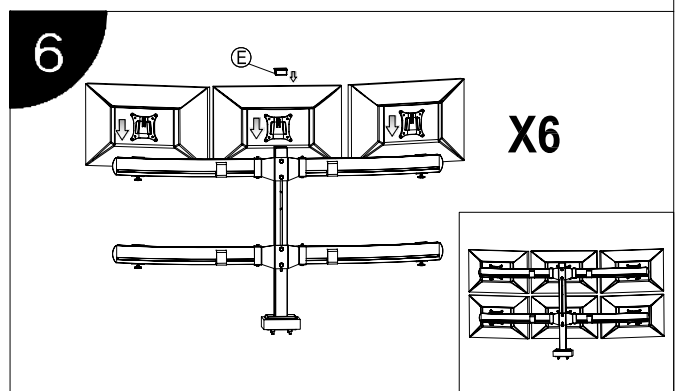
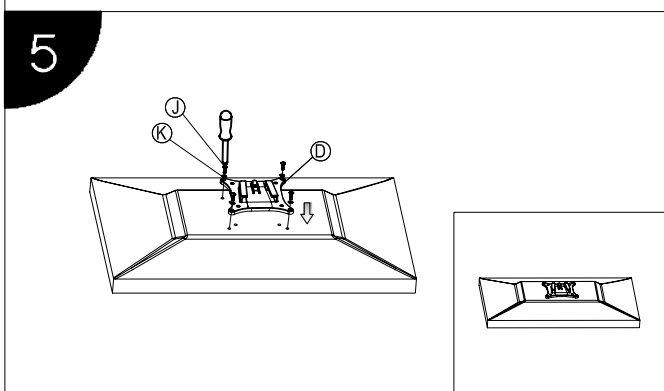
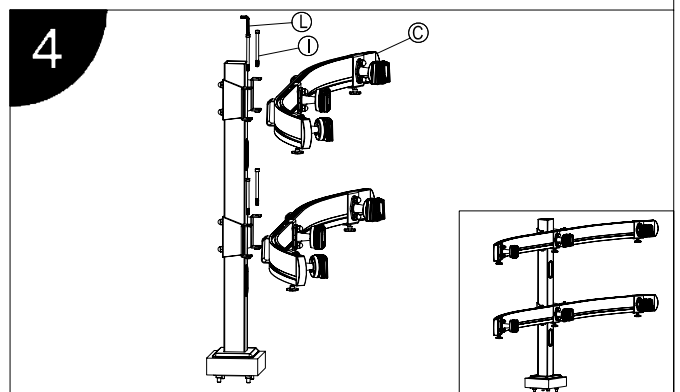
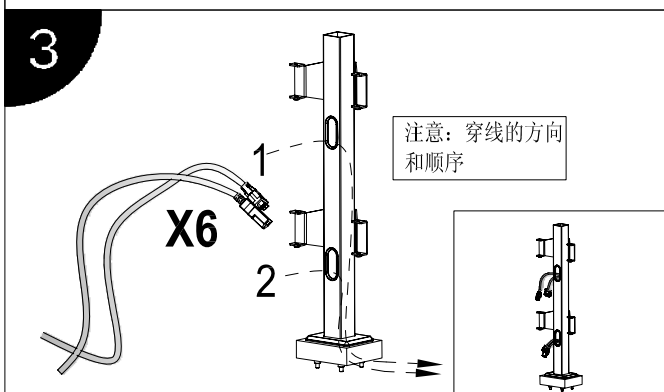


Installation Manual

 
 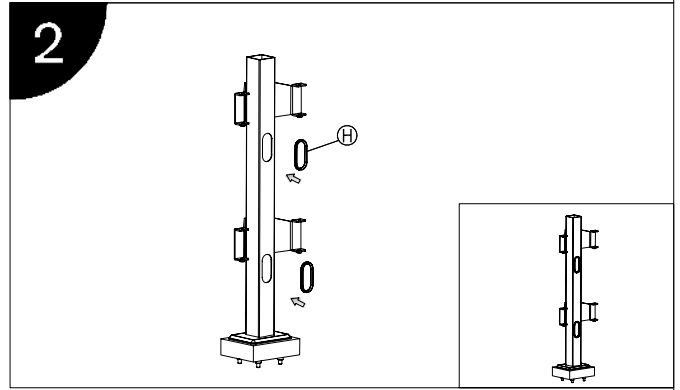


 

 

 


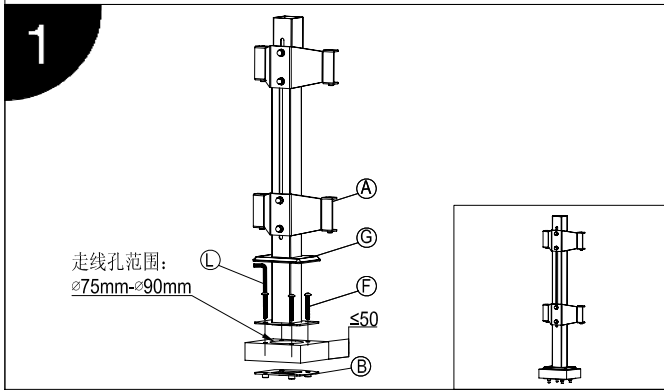

 
Model No.: BL600

Installation Steps



Installation Manual

Model No.: BL600

Parts list			
No.	ITEM	SPECS	QUANTITY
A			1
B			1
C			2
D			6
E			1
F		M8*65	4
G			1
H			2
I		M6*80	4
J		M4*12	24
K		M4	24
L		M5	1
M		M3	1
N		M8	1